# PRODUCT MANUAL

Scream Box & Mega Scream Box

 




## Product Specifications

#### Features:

- USB Memory Stick upload: If you are going to be using only a few small audio files you can put them on a USB memory stick and it will read them into the limited internal memory. You can then remove the USB stick.
- SD Memory Card: Place all audio files onto an SD card and insert into Scream Box. SD card must be left in the Scream Box.
- Note: USB Stick and SD Memory Card are not included with the Scream Box. You will need one or the other in order to use your own audio.
- · No tools or software needed.
- Will not "forget" program when powered down.
- Storage medium: Built-in SPI Flash/SD card.
- Internal flash supports 5-30 minutes of sound. Maximum SD card size is 2 Gig.
- Supports MP3 format files .
- Supports two modes: All loop one by one and single loop.
- Built-in power amplifier to ensure loud and clear sound.
- · Comes with appropriate power supply.
- **MEGA SCREAM BOX ONLY:** Use any of our triggers: Step-mat, Motion Sensor, Hand Trigger, Beam Sensor, Wireless Trigger, etc... (Standard Scream Box comes with built-in PIR motion sensor and cannot use external sensors)



Quick Operation Guide


**KEY A:** Hold down KEY A for 3 seconds to set player to "Play All" mode. In this mode the player will cycle through all sound files on the SD card, playing a new sound each time it is triggered.


**KEY B:** Hold down KEY B for 3 seconds to enter "Single Play" mode. In this mode the same file will be played each time the Scream Box is activated.

**KEY C & L:** Used for adjusting volume. Holding down KEY C for 3 seconds with a USB flash drive inserted will copy the files to internal memory. The LED indicator will flash until the copy is completed. Remove USB flash drive when done. All files in the root of the SD card will be copied.


For the best audio quality, the use of an SD card is recommended.


## Common Wiring Diagrams (MEGA SCREAM BOX ONLY):

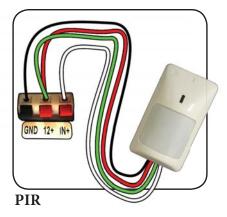

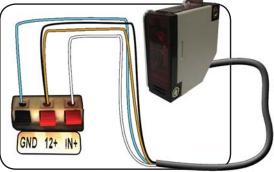

**Beam Sensor** 

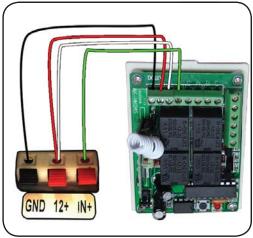

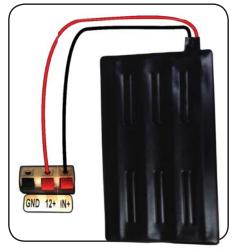

Wireless Trigger

**Step Mat** 

#### ATTENTION!

### **Audio Not Playing?**

Make sure your file names are under 5 characters long. So, instead of ScaryScreamNumber1.mp3 try 1.mp3. Also, remember that the Mega Scream Box only plays .mp3 files. Make sure your file is in the correct format! Maximum SD card size is 2 GIGs!





COPYRIGHT © FRIGHTPROPS, LLC. PLEASE CONTACT US IF YOU WOULD LIKE TO REPRODUCE OR REPUBLISH PORTIONS OF THIS DOCUMENT. FRIGHTPROPS, LLC has no control over the use of any product and therefore expects the user to exercise good judgment as to the proper selection, installation, use and maintenance of any product. FRIGHTPROPS, LLC assumes no responsibility for damage or injury of any kind due to misuse or improper application in any way by any person.

**REVISED JUNE 2015**